

# Installation Guide Power Supply

ENG

## Type S02-72/600

## Power range 600 W



### Important Notice:

**Please note that we use machine translation to provide documents in your local language. It is possible that not all texts will be translated correctly. If you have any questions or discrepancies regarding the accuracy of the information in the translated version, please read the original English version (0185-1184-E).**

## Content

<b>1</b>	<b>General Information .....</b>	<b>3</b>
1.1	Introduction .....	3
1.2	Explanation of Symbols .....	3
1.3	Qualified Personnel .....	3
1.4	Liability .....	3
1.5	Copyright .....	3
<b>2</b>	<b>Safety Instructions .....</b>	<b>4</b>
2.1	Personal Safety .....	4
2.2	Application as directed .....	4
2.3	Transport, Storage.....	4
2.4	Installation.....	4
2.5	Electrical Connection .....	5
2.6	Operation .....	5
2.7	Protection of Persons .....	5
<b>3</b>	<b>Mains Connection and Grounding.....</b>	<b>6</b>
<b>4</b>	<b>Description of the Connectors / Interfaces.....</b>	<b>7</b>
4.1	Protective Earth.....	7
4.2	X30 .....	7
4.3	X56 .....	7
<b>5</b>	<b>LED Blink Codes.....</b>	<b>7</b>
<b>6</b>	<b>Physical Dimension.....</b>	<b>8</b>
<b>7</b>	<b>Output Voltage Regulation .....</b>	<b>9</b>
<b>8</b>	<b>Load Behavioral.....</b>	<b>9</b>
<b>9</b>	<b>Parallel Connection .....</b>	<b>10</b>
<b>10</b>	<b>DIN-Rail Mounting.....</b>	<b>11</b>
<b>11</b>	<b>Ordering Information.....</b>	<b>11</b>
<b>12</b>	<b>International Certificates .....</b>	<b>12</b>
<b>13</b>	<b>Declaration of Conformity and CE-marking.....</b>	<b>18</b>

# 1 General Information

## 1.1 Introduction

Observe the following safety instructions and the instructions on the unit (the term "unit" in the following refers to a single power supply module) as well as all the information in this manual in order to prevent danger to persons and hazards or damage to the unit and other connected products.

## 1.2 Explanation of Symbols



Triangular warning symbols warn against a danger.



Round command symbols tell what to do.

## 1.3 Qualified Personnel

All work such as transport, installation, commissioning and service is only allowed to be carried out by qualified personnel. Qualified personnel in the sense of the safety instructions in this documentation are persons who are familiar with the transport, installation, assembly, commissioning and operation of the product and who have the appropriate qualifications.

This manual must be read carefully before transport, installation, commissioning, service and all safety-related information must be adhered to.

## 1.4 Liability

NTI AG (as manufacturer of LinMot linear motors and MagSpring products) excludes all liability for damages and expenses caused by incorrect use of the products. This also applies to false applications, which are caused by NTI AG's own data and notes, for example in the course of sales, support or application activities. It is the sole responsibility of the user to check the information and information provided by NTI AG regarding their safety-relevant correctness. In addition, the entire responsibility for safety-related product functionality lies exclusively with the user. Product warranties are void if products are used with stators, sliders, servo drives or cables not manufactured by NTI AG unless such use was specifically approved by NTI AG. NTI AG's warranty is limited to repair or replacement as stated in our standard warranty policy as described in our "terms and conditions" previously supplied to the purchaser of our equipment (please request copy of same if not otherwise available). Further reference is made to our general terms and conditions.

## 1.5 Copyright

This work is protected by copyright.

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, microfilm, storing in an information retrieval system, not even for training purposes, or translating, in whole or in part, without the prior written consent of NTI AG.

LinMot® is a registered trademark of NTI AG.

## 2 Safety Instructions

### 2.1 Personal Safety



#### **For your personal safety**

Disregarding the following safety measures can lead to severe injury to persons and damage to material:

- Only use the product as directed.
- Never commission the product in the event of visible damage.
- Never commission the product before assembly has been completed.
- Do not carry out any technical changes on the product.
- Only use the accessories approved for the product.
- Only use original spare parts from LinMot.
- Observe all regulations for the prevention of accidents, directives and laws applicable on site.
- Transport, installation, commissioning and maintenance work must only be carried out by qualified personnel.
  - Observe IEC 364 and CENELEC HD 384 or DIN VDE 0100 and IEC report 664 or DIN VDE 0110 and all national regulations for the prevention of accidents.
  - According to the basic safety information, qualified, skilled personnel are persons who are familiar with the assembly, installation, commissioning, and operation of the product and who have the qualifications necessary for their occupation.
- Observe all specifications in this documentation.
  - This is the condition for safe and trouble-free operation and the achievement of the specified product features.
  - The procedural notes and circuit details described in this documentation are only proposals. It is up to the user to check whether they can be transferred to the particular applications. NTI AG / LinMot does not accept any liability for the suitability of the procedures and circuit proposals described.
- LinMot servo drives, power supplies and the accessory components can include live and moving parts (depending on their type of protection) during operation. Surfaces can be hot.
  - Non-authorized removal of the required cover, inappropriate use, incorrect installation or operation create the risk of severe injury to persons or damage to material assets.
  - For more information, please see the documentation.
- High amounts of energy are produced in the power supply. Therefore, it is required to wear personal protective equipment (body protection, headgear, eye protection, hand guard).

### 2.2 Application as directed

- LinMot power supplies are components, which are designed for installation in electrical systems or machines. They are not to be used as domestic appliances, but only for industrial purposes according to EN 61000-3-2.
- When power supplies are installed into machines, commissioning (i.e. starting of the operation as directed) is prohibited until it is proven that the machine complies with the regulations of the EC Directive 2006/42/EG (Machinery Directive); EN 60204 must be observed.
- Commissioning (i.e. starting of the operation as directed) is only allowed when there is compliance with the EMC Directive (2014/30/EU).
- The technical data and supply conditions can be obtained from the nameplate and the documentation. They must be strictly observed.

### 2.3 Transport, Storage

- Please observe the notes on transport, storage, and appropriate handling.
- Observe the climatic conditions according to the technical data.

### 2.4 Installation

- The power supply must be installed and cooled according to the instructions given in the corresponding documentation.
- The ambient air must not exceed degree of pollution 2 according to EN IEC 61800-5-1.

- Ensure proper handling and avoid excessive mechanical stress. Do not bend any components and do not change any insulation distances during transport or handling. Do not touch any electronic components and contacts.
- Power supplies contain electrostatic sensitive devices, which can easily be damaged by inappropriate handling. Do not damage or destroy any electrical components since this might endanger your health!

## 2.5 Electrical Connection



When working on live power supplies, observe the applicable national regulations for the prevention of accidents.



The electrical installation must be carried out according to the appropriate regulations (e.g. cable cross-sections, circuit breakers, fuses, PE connection). Additional information can be obtained from the documentation.



This product can cause high-frequency interferences in non-industrial environments, which can require measures for interference suppression.

## 2.6 Operation

- If necessary, systems containing switching power supplies must be equipped with additional monitoring and protective devices in accordance with the applicable safety regulations (e.g. law on technical equipment, regulations for the prevention of accidents).
- After the power supply has been disconnected from the supply voltage, all live components and power connections must not be touched immediately because capacitors can still be charged. Please observe the corresponding stickers on the power supply. All protection covers and doors must be shut during operation.

## 2.7 Protection of Persons



The power terminals L, N and PWR+, PGND remain energized for a maximum of five minutes after the power supply has been disconnected.



Before servicing, disconnect supply, wait 5 minutes and measure between PWR+ and PGND to be sure that the capacitors have discharged below 42 VDC.



The housing of the power supply can have an operating temperature of  $> 80\text{ }^{\circ}\text{C}$ : Contact with the heat sink results in burns.

### 3 Mains Connection and Grounding

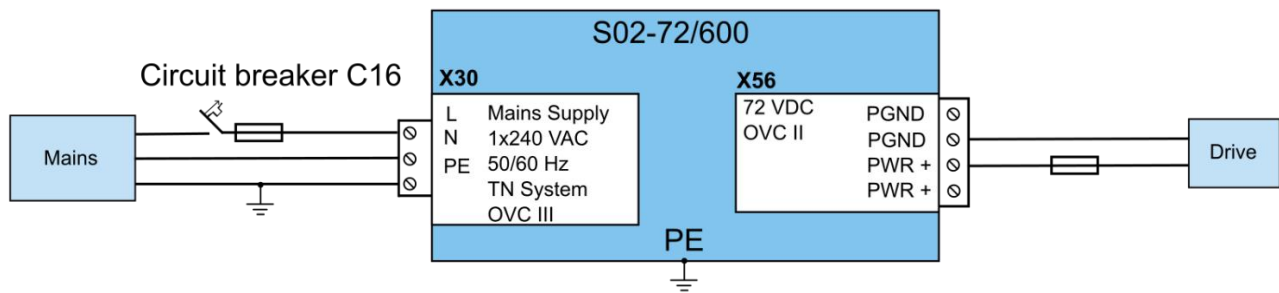


Figure 3-1: Mains connection, grounding and overvoltage category (OVC)



In order to assure a safe and error free operation, and to avoid severe damage to system components, **all system components must be well grounded to protective earth PE.** This includes both LinMot and all other control system components on the same ground bus.



Each system component should be tied directly to the ground bus (**star pattern**). Daisy chaining from component to component is forbidden.



**Power supply connectors must not be connected or disconnected while DC voltage is present.** (Capacitors in the power supply may not fully discharge for several minutes after input voltage has been disconnected). Failure to observe these precautions may result in severe damage to electronic components in LinMot motors and/or drives.




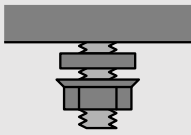

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code / Canadian Electrical Code, and any additional local codes.





**Do not switch Power Supply DC Voltage.** All power supply switching and E-Stop breaks should be done to the AC supply voltage of the power supply. Failure to observe these precautions may result in severe damage to the power supply unit.

## 4 Description of the Connectors / Interfaces


### 4.1 Protective Earth

	<b>Protective Earth</b>	
	1	 Protective Earth
	<ul style="list-style-type: none"><li>- Use min 4 mm<sup>2</sup> (AWG 11)</li><li>- Tightening Torque 2 Nm (18 lbin)</li></ul>	

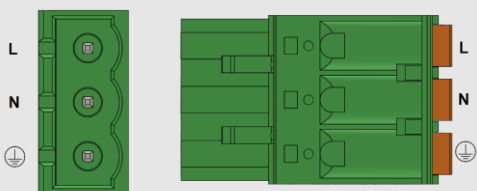


### 4.2 X30

<b>X30</b>	<b>Supply Mains</b>	
	3	L 1x100-120/1x220-240 V <sub>AC</sub> 50/60 Hz
	2	N
	1	 Protective Earth
	<ul style="list-style-type: none"><li>- Use 60/75°C copper conductors only</li><li>- Conductor cross-section 1.5 – 2.5 mm<sup>2</sup> / AWG 13 - 16</li><li>- Stripping length: 10 mm</li><li>- external circuit breaker (16 A Type C UL listed) required</li><li>- total conductor length must be 10 m or less</li><li>- Suitable for use on a circuit with Short Circuit Current Rating (SCCR) not more than 5 kA rms symmetrical.</li><li>- Inrush current limitation: &lt; 20 A<sub>peak</sub> typ. cold</li></ul>	

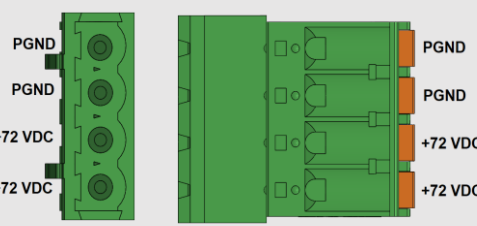
### 4.3 X56

<b>X56</b>	<b>DC Output</b>	
	1, 2	+72 VDC Positive output
	3, 4	PGND Negative output
	<ul style="list-style-type: none"><li>- Use 60/75°C copper conductors only</li><li>- Conductor cross-section 1.5 – 2.5 mm<sup>2</sup> / AWG 13 - 16</li><li>- Stripping length: 10 mm</li><li>- total conductor length must be 10 m or less</li></ul>	

## 5 LED Blink Codes

LED Blink Codes		
 Enabled  Error  Warn		
ENABLED	ERROR	Description
On	Off	Power supply is enabled
Off / On	On	Error occurred
WARN		Description
On		Close to maximal power envelope
Blinking		Cool down phase enable, blinking will occur even if the LED is on.
Off		Power supply is enabled

## 6 Physical Dimension

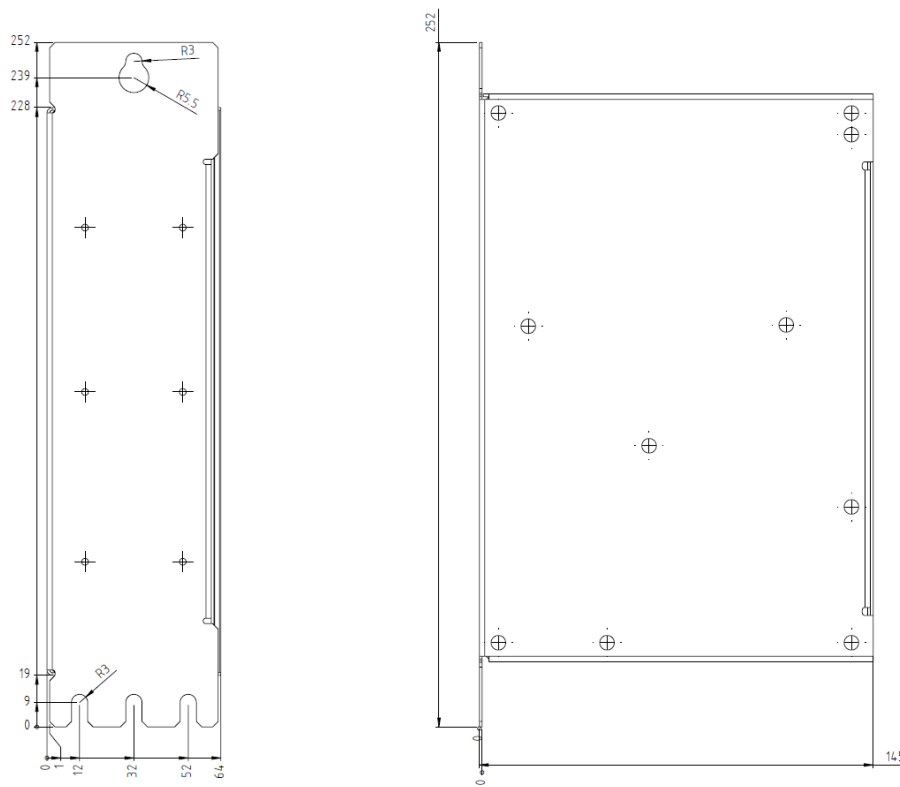


in mm

**Figure 6-1: Drawing of the power supply**

S02-72/600 Power Supplies		
Width	mm	64
Height	mm	209
Height with fixings	mm	252
Depth	mm	145
Weight	kg	2.6
Mounting screws		up to M5
Mounting distance	mm	257 - 262
Case, degree of protection	IP	20
Storage temperature	°C	-25...40
Transport temperature	°C	-25...70
Operating temperature	°C	0...40 at rated data
Relative humidity		< 95% (non-condensing)
Pollution		Pollution degree 2 acc. EN IEC 61800-5-1
Altitude		< 2000 m above sea level
Max. power dissipation	W	60
Mounting place		Control cabinet with minimum protection class IP54
Minimum distance between surrounding components and air admission and air exit holes	mm	50




## 7 Output Voltage Regulation

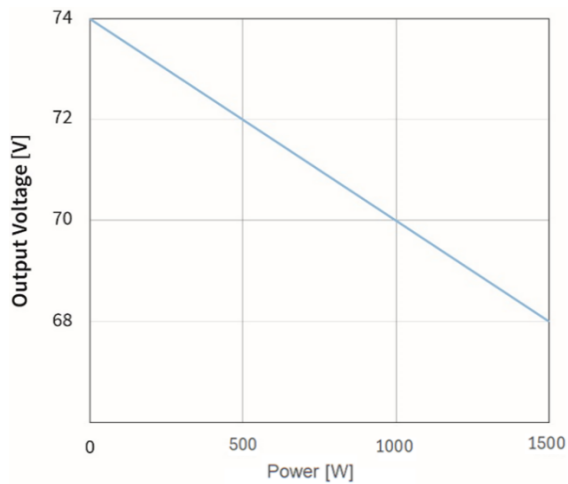

## 8 Load Behavioral

During power boost mode, the power supply can provide up to 1500 W for a limited time. The overload is calculated over a period of 4 seconds. If the overload stays below 500 W\*s during 4 seconds, no cool down phase is required (green area in Figure 8-1).

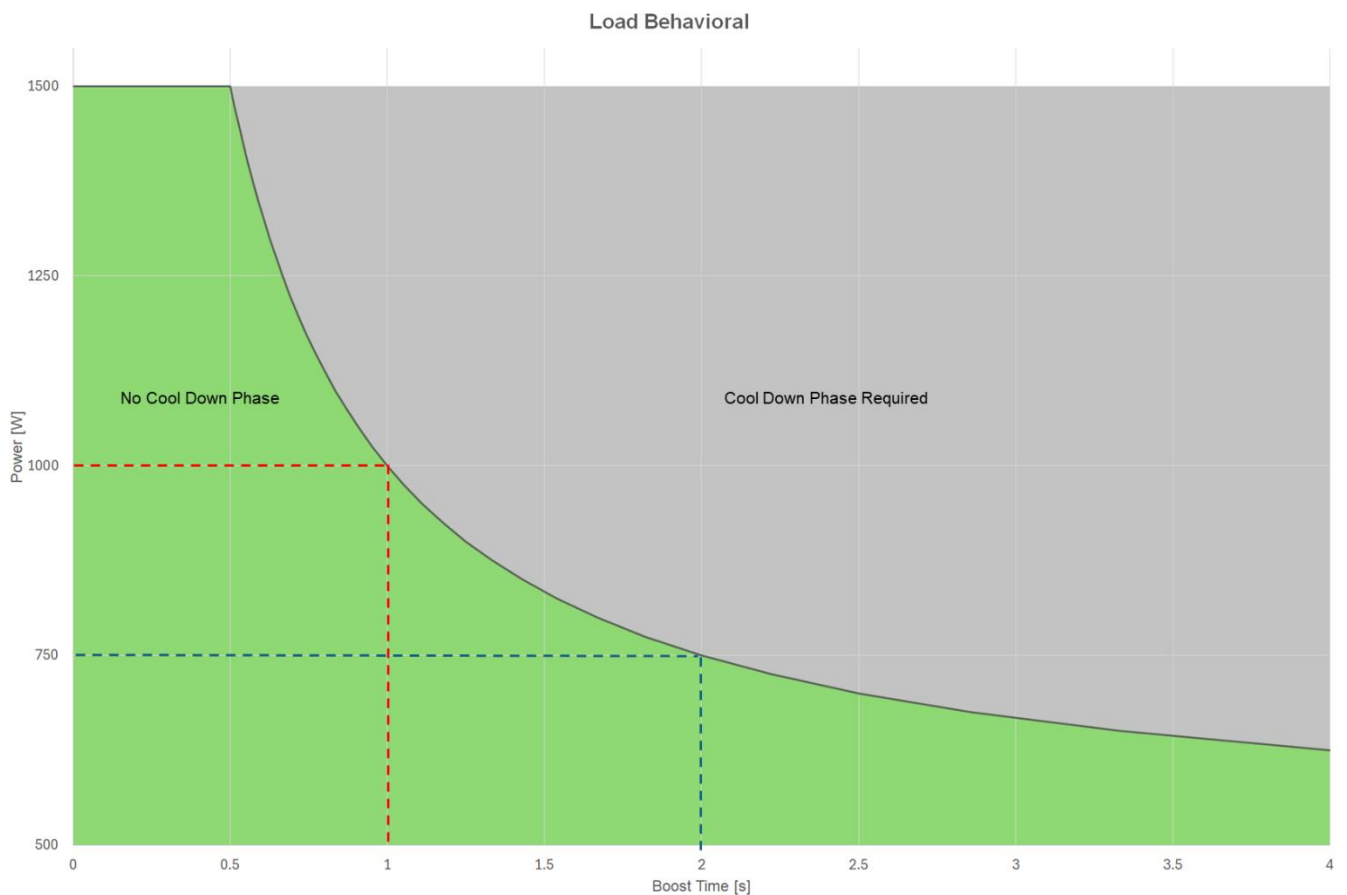


**Figure 8-1: Load Behavioral**

Example1: Within a period of 4 seconds, the power supply may deliver 750 W during a total time of up to 2 seconds, without requiring a cool down phase (blue box).

Example2: Within a period of 4 seconds, the power supply may deliver 1000 W during a total time of up to 1 second, without requiring a cool down phase (red box).

The required cool down phase can be found in **Figure 8-2: Boost time versus required cool down phase**. The RMS power of the power supply should not exceed 600 W with the power boost included.

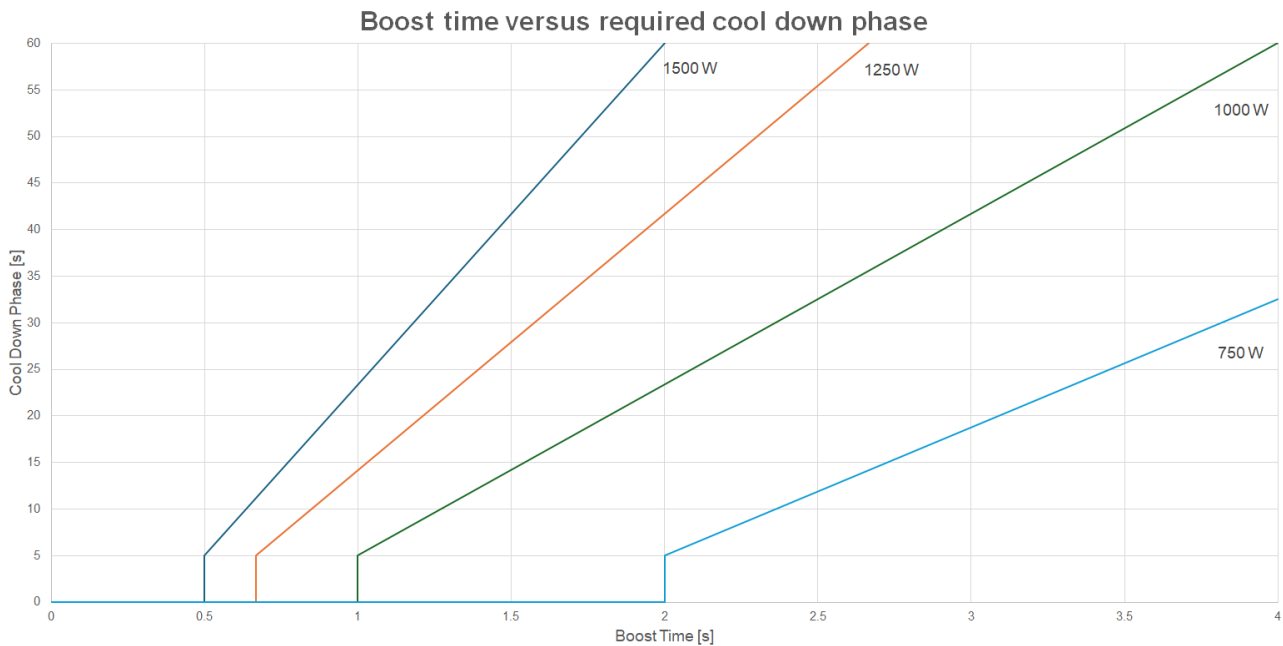

**Figure 8-2: Boost time versus required cool down phase**

Example 1: If the power supply delivers 750 W during a total time of 2.0 seconds within a period of 4 seconds, no cool down phase is required.

Example 2: If the power supply delivers 750 W during a total time of 2.5 seconds within a period of 4 seconds, the output power will be limited at 500 W for 12 seconds.

Note: Due to tolerances, it is advisable to keep a reserve of 5%.

## 9 Parallel Connection

Up to three power supplies can be connected in parallel. The power supply detects automatically the parallel connection. The connected wires have to be adjusted to the maximal current. The connectors of the power supply are rated for 10 A. The Power Boost is not synchronized but still available.<sup>1</sup>

<sup>1</sup> UL 61800-5-1 does not support parallel connection of power supplies. This function is not covered with the UL certification of the power supply.

## 10 DIN-Rail Mounting

For mounting the power supply on DIN rails use the 0150-6906 DIN rail adapter.



Use only the provided M3x8 screws with the added washer. Don't use different screws to mount the DIN rail adapter.

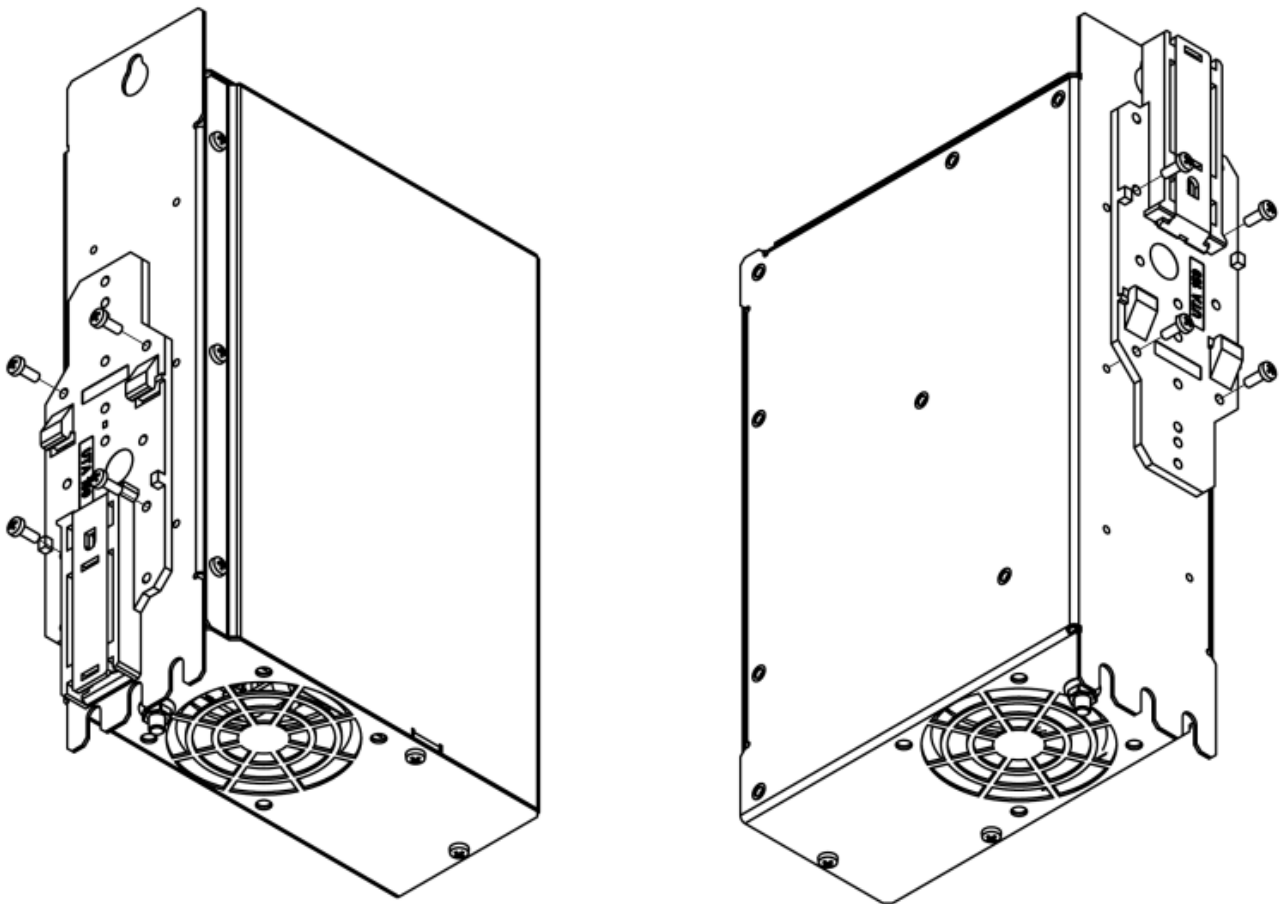







Figure 10-1: Left DIN-Rail Mont Bottom, Right DIN-Rail Mount Top

## 11 Ordering Information

Item	Description	Item-No.
S02-72/600	Power Supply 72 V/600 W, 100-120VAC/220-240VAC	0150-5700
SM01-600	DIN rail adapter for S02-72/600	0150-6906

## 12 International Certificates

<p>Europe</p> 	<p>See chapter 13 “Declaration of Conformity and CE-marking”</p>
<p><i>IECEE CB SCHEME</i></p>	<p>Ref. Certif. No. CH-12209</p>
<p>USA / Canada</p> 	<p>All products marked with this symbol are tested and listed by Underwriters Laboratories and the production facilities are checked quarterly by an UL inspector. This mark is valid for the USA and Canada and eases certification of your machines and systems in these areas. File number E316095 UL 61800-5-1 Power Conversion Equipment CSA C22.2 Industrial Control Equipment</p>

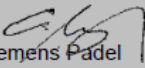		Ref. Certif. No. <b>CH-12209</b>
IEC SYSTEM FOR MUTUAL RECOGNITION OF TEST CERTIFICATES FOR ELECTRICAL EQUIPMENT (IECEE) CB SCHEME		
<b>CB TEST CERTIFICATE</b>		
Product	Power supply	
Name and address of the applicant	NTI AG Bodenaeckerstrasse 2, 8957 Spreitenbach Switzerland	
Name and address of the manufacturer	NTI AG Bodenaeckerstrasse 2, 8957 Spreitenbach Switzerland	
Name and address of the factory	NTI AG Bodenaeckerstrasse 2, 8957 Spreitenbach Switzerland	
<i>Note: When more than one factory, please report on page 2</i>		
Ratings and principal characteristics	Input 230 V / 110 V, 50 / 60 Hz, 3.2 A Output 72 V / 7 A	
Trademark / Brand (if any)	LinMot	
Customer Test Facility (CTF) Stage used		
Model / Type Ref.	S02-72/600	
Additional information (if necessary may also be reported on page 2)	IEC 61000-6-4:2006 IEC 61000-6-4:2006/AMD1:2010 IEC 61000-3-2:2014 (ed. 4)	
A sample of the product was tested and found to be in conformity with	IEC 61000-6-2:2016 IEC 61000-6-4:2018 IEC 61000-3-2:2018 IEC 61000-3-2:2018/AMD1:2020 IEC 61000-3-3:2013 IEC 61000-3-3:2013/AMD1:2017 IEC 61000-3-3:2013/AMD2:2021	
As shown in the Test Report Ref. No. which forms part of this Certificate	TR_EMCKP5848A	
This CB Test Certificate is issued by the National Certification Body		
	eurofins Eurofins Electric & Electronic Product Testing AG Luppenstrasse 3 8320 Fehraltorf SWITZERLAND	
Date: 2024-06-06	Signature: Clemens Padel 	



# Certificate of Compliance

**Certificate Number(s):**

UL-US-2205770-1

**Report Reference:**

E316095-20220222

**Issue Date:**

2025-07-31

Issued to:

**NTI AG**

**Bodenaeckerstr 2, SPREITENBACH, 8957, CH**

This certificate confirms that representative samples of:

**NMMS - Power Conversion Equipment**

**See Addendum Page for Product Designation(s).**

Have been evaluated by UL in accordance with the Standard(s) indicated on this Certificate.

**UL 61800-5-1, Edition 2, Issue Date 2022-06-24**

Additional Information:

See UL Product iQ® at <https://iq.ulprospector.com> for additional information.

This Certificate of Compliance indicates that representative samples of the product described in the certification report have met the requirements for UL certification. It does not provide authorization to apply the UL Mark. Only the Authorization Page that references the Follow-Up Services Procedure for ongoing surveillance provides authorization to apply the UL Mark.

Only those products bearing the UL Mark should be considered as being UL Certified and covered under UL's Follow-Up Services.

Look for the UL Certification Mark on the product.

A handwritten signature in black ink, appearing to read 'David Piecuch'.

David Piecuch

UL Mark Certification Program Manager

Any information and documentation involving UL Mark services are provided on behalf of UL LLC (UL) or any authorized licensee of UL. For questions, please contact UL Solutions Customer Service at <https://www.ul.com/contact-us>.

# CERTIFICATE OF COMPLIANCE

**Certificate number(s):** UL-US-2205770-1  
**Report reference:** E316095-20220222  
**Issue Date:** 2025-07-31

This is to certify that representative samples of the product as specified on this certificate were tested according to the current UL requirements.

## **Open Type, Power Conversion Equipment, Non-Isolated Power Supply**

**Model(s):** S02-72/1000

## **Power Conversion Equipment**

**Model(s):** S02-72/600



David Piecuch  
UL Mark Certification Program Manager

Any information and documentation involving UL Mark services are provided on behalf of UL LLC (UL) or any authorized licensee of UL. For questions, please contact UL Solutions Customer Service at <https://www.ul.com/contact-us>.





# Certificate of Compliance

**Certificate Number(s):**

UL-CA-2205785-1

**Report Reference:**

E316095-20220222

**Issue Date:**

2025-07-31

**Issued to:**

**NTI AG**

**Bodenaeckerstr 2, SPREITENBACH, 8957, CH**

This certificate confirms that representative samples of:

**NMMS7 - Power Conversion Equipment Certified for Canada**

**See Addendum Page for Product Designation(s).**

Have been evaluated by UL in accordance with the Standard(s) indicated on this Certificate.

**CSA C22.2 No. 274, 2nd Ed., Issue Date: 2017-04-01**

**Additional Information:**

See UL Product iQ® at <https://iq.ulprospector.com> for additional information.

This Certificate of Compliance indicates that representative samples of the product described in the certification report have met the requirements for UL certification. It does not provide authorization to apply the UL Mark. Only the Authorization Page that references the Follow-Up Services Procedure for ongoing surveillance provides authorization to apply the UL Mark.

Only those products bearing the UL Mark should be considered as being UL Certified and covered under UL's Follow-Up Services.

Look for the UL Certification Mark on the product.



A handwritten signature in black ink, appearing to read 'David Piecuch'.

David Piecuch

UL Mark Certification Program Manager

Any information and documentation involving UL Mark services are provided on behalf of UL LLC (UL) or any authorized licensee of UL. For questions, please contact UL Solutions Customer Service at <https://www.ul.com/contact-us>.



# CERTIFICATE OF COMPLIANCE

**Certificate number(s):** UL-CA-2205785-1  
**Report reference:** E316095-20220222  
**Issue Date:** 2025-07-31

This is to certify that representative samples of the product as specified on this certificate were tested according to the current UL requirements.

## **Open Type, Power Conversion Equipment, Non-Isolated Power Supply**

**Model(s):** S02-72/1000

## **Power Conversion Equipment**

**Model(s):** S02-72/600



David Piecuch  
UL Mark Certification Program Manager

Any information and documentation involving UL Mark services are provided on behalf of UL LLC (UL) or any authorized licensee of UL. For questions, please contact UL Solutions Customer Service at <https://www.ul.com/contact-us>.



## 13 Declaration of Conformity and CE-marking

NTI AG / *LinMot*®

Bodenaeckerstrasse 2

8957 Spreitenbach

Switzerland

Tel.: +41 (0)56 419 91 91

Fax: +41 (0)56 419 91 92

declares under sole responsibility the compliance of the products:

Power supplies of the Series **S02-72/600**

with the

**Low Voltage Directive 2014/35/EU**

Applied harmonized standard:

**EN 61800-5-1: 2022**

**EMC Directive 2014/30/EU**

Applied harmonized standards:

**EN 61000-6-2: 2016 (Immunity for industrial environments)**

**EN 61000-6-4: 2006 + A1:2010 (Emission for industrial environments)**

**EN 61000-6-4: 2018**

According to the EMC directive, the listed devices are not independently operable products.

Compliance of the directive requires the correct installation of the product, the observance of specific installation guides and product documentation. This was tested on specific system configurations.

The safety instructions of the manuals are to be considered.

The product must be mounted and used in strict accordance with the installation instructions contained within the installation guide, a copy of which may be obtained from NTI AG.

Company: NTI AG

Spreitenbach, 06.06.2024



Dr.-Ing. Ronald Rohner  
CEO NTI AG



Dr.-Ing. Marco Hitz  
RESPONSIBLE FOR DOCUMENTATION

# ALL LINEAR MOTION FROM A SINGLE SOURCE

## Europe / Asia Headquarters

**NTI AG - LinMot & MagSpring**  
Bodenaeckerstrasse 2  
CH-8957 Spreitenbach  
Switzerland

Sales / Administration: +41 56 419 91 91  
[office@linmot.com](mailto:office@linmot.com)

Tech. Support: +41 56 544 71 00  
[support@linmot.com](mailto:support@linmot.com)

Web: <https://www.linmot.com/>

Visit <https://linmot.com/contact/> to find a distributor near you.

## North / South America Headquarters

**LinMot USA Inc.**  
N1922 State Road 120, Unit 1  
Lake Geneva, WI 53147  
USA

Sales / Administration: 262.743.2555  
[usasales@linmot.com](mailto:usasales@linmot.com)

Tech. Support: 262.743.2555  
[usasupport@linmot.com](mailto:usasupport@linmot.com)

Web: <https://www.linmot-usa.com/>